

RESERVDELSINFORMATION / PARTS INFORMATION

315 Parts Information

Ingersoll Rand 315

Originaldokument: Ingersoll Rand

Tillhandahålls av Professional Technologies Sweden AB

Original document by Ingersoll Rand, provided by

Professional Technologies Sweden AB - authorized Ingersoll Rand distributor.

Produkt / Product: skanna QR-koden · scan QR



Service · Kalibrering · Originalreservdelar

Service · Calibration · Genuine spare parts


protech.nu

protech@protech.nu · +46 303-891 35

Munkerödsvägen 5, 444 32 Stenungsund, Sverige · Org.nr 556684-8270

Ingersoll Rand och logotypen är varumärken som tillhör Ingersoll Rand Inc. Ingersoll Rand and the logo are trademarks of Ingersoll Rand Inc.

Models 315 and 315-EU Straight Line Air Sander - Exploded View

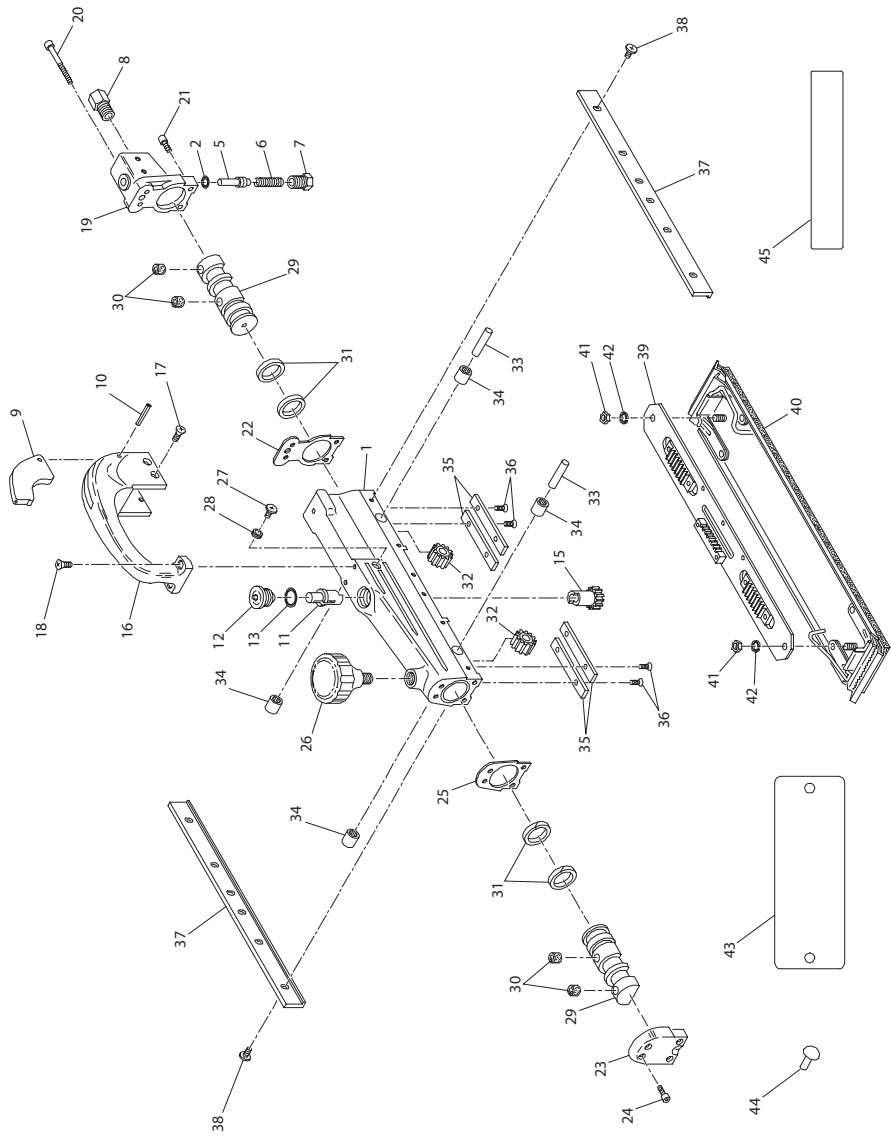

(Dwg. TPA990-3)

Models 315 and 315-EU Straight Line Air Sander - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing Assembly (includes reverse valve bushing)	315-A40	27	Oiler Cavity Screw	315-328
2	Throttle Valve Seal	315-306	28	Oiler Cavity Washer	315-329
5	Throttle Valve	315-304	29	Piston Assembly (2)	315-A5
6	Throttle Valve Spring	315-305	30	Felt Piston Plug (2 for each piston)	315-7
7	Throttle Valve Spring Seat	315-103	31	Piston Seal Ring (2 for each piston)	315-6
8	Inlet Bushing	315-565	32	Piston Pinion Gear (2)	315-9
9	Throttle Lever	315-273	33	Piston Pinion Gear Shaft (2)	315-191
10	Throttle Lever Pin	315-274	34	Pinion Gear Shaft Bearing (4)	315-24
11	Reverse Valve	315-330	35	Wear Plate (4)	315-37
12	Reverse Valve Cap Assembly	315-A331	36	Wear Plate Screw (8)	315-324
13	Reverse Valve Cap O-Ring	315-332	37	Guide Plate (2)	315-36
15	Reverse Valve Pinion	315-310	38	Guide Plate Screw (12)	315-327
16	Rear Handle	315-59	39	Drive Board (includes racks)	315-38
17	Rear Handle Screw (4) (short)	315-320	40	Sanding Pad Assembly	315-39
18	Rear Handle Screw (2) (long)	315-326	41	Sanding Pad Nut (2)	315-323
19	Backhead (includes throttle valve bushing)	315-A102	42	Sanding Pad Lock Washer (2)	315-441
20	Backhead Mounting Screw (2) (long)	315-325	43	Nameplate	
21	Backhead Mounting Screw (2) (short)	315-321		for 315	315-301
22	Backhead Gasket	315-740		for 315-EU	315-EU-301
23	Fronthead	315-240	44	Nameplate Drive Screw (2)	222-302
24	Fronthead Mounting Screw (4)	315-321	45	Warning Label	
25	Fronthead Gasket	315-739		for 315	WARNING-5-99
26	Front Handle	315-48		for 315-EU	EU-99

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 04584967.

Product Information Manual 80156177.

Manuals can be downloaded from www.ingersollrandproducts.com