

RESERVEDELSINFORMATION / PARTS INFORMATION

7P and 7S Parts Information

Ingersoll Rand 7S60L · 7S48L · 7P24L

Originaldokument: Ingersoll Rand

Tillhandahålls av Professional Technologies Sweden AB

Original document by Ingersoll Rand, provided by

Professional Technologies Sweden AB - authorized Ingersoll Rand distributor.


Produkt / Product: skanna QR-koden · scan QR



Service · Kalibrering · Originalreservdelar

Service · Calibration · Genuine spare parts

7S30L, 7S48L, 7S60L, 7P24L Sander and Polisher Exploded Diagram

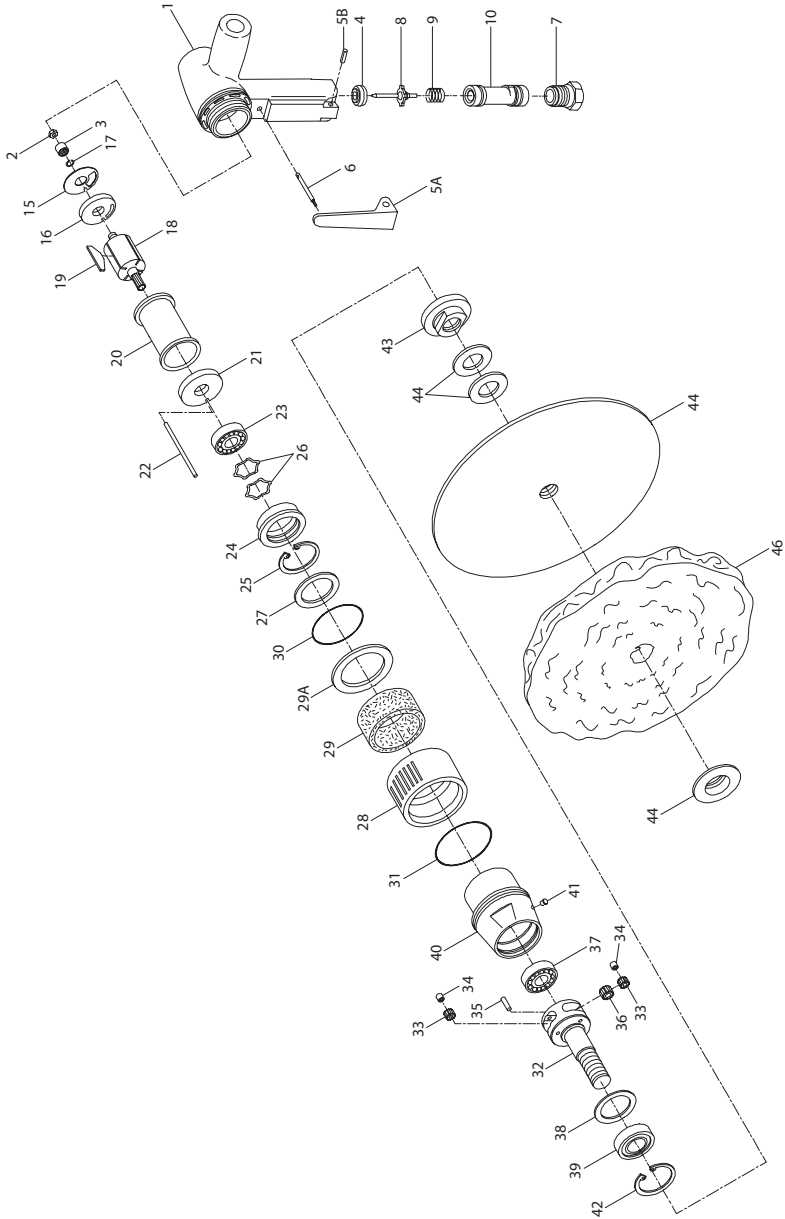

(Dwg. TPA908-6)

7530L, 7548L, 7560L, 7P24L Sander and Polisher Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
† 1	Motor Housing Assembly		31	Exhaust Deflector Front Seal	AF160-291Z
	for Models 7560L, 7548L, 7530L and 7P24L	7560L-A40		Arbor Assembly	
	for Models 7560L-EU, 7548L-EU, 7530L-EU and 7P24L-EU	7560L-EU-A40		for Model 7560L	7560-A4
				for Model 7548L	7548-A4
				for Model 7530L	7530-A4
*	Nameplate Kit			for Model 7P24L	7P24-A4
	for models ending in -EU	75-EU-K301	32	Arbor	
	for all other models	75-K301		for Model 7560L	7560-4
	Nameplate Screw (2)	BN403-302		for Model 7548L	7548-4
				for Model 7530L	7530-4
*	Warning Label			for Model 7P24L	7P24-4
	for models ending in -EU	EU-99	33	Arbor Planet Gear Assembly (3)	
	for all other models	WARNING-5-99		for Model 7560L	7AH-A10
2	Bearing Nut	7AH-105		for Model 7548L	7AJ-A10
3	Rear Rotor Bearing	7AH-24		for Model 7530L	7AK-A10
4	Throttle Valve	2908-303		for Model 7P24L	7AL-A10
5A	Throttle Lever (for Models 7560L, 7548L, 7530L and 7P24L)	7560L-273	34	Planet Gear Bearing (1 for each Gear)	
5B	Throttle Lever Pin (for Models 7560L, 7548L, 7530L and 7P24L)	7L-120		for Model 7560L	7AH-500
6	Throttle Plunger (for Models 7560L, 7548L, 7530L and 7P24L)	7560-94		for Model 7548L	7AJ-500
				for Models 7530L and 7P24L	7AK-500
7	Inlet Bushing	402-565	35	Arbor Planet Gear Shaft (3)	
8	Throttle Valve	LG2-302		for Model 7560L	R31-121
9	Throttle Valve Spring	7560-51		for Model 7548L	7548-191
10	Valve Spring Spacer	2905P-198		for Models 7530L and 7P24L	7P24-191
15	Rear End Plate Gasket	7AH-739	36	Rotor Pinion	
16	Rear End Plate	7AH-12		for Model 7560L	7AH-17
17	Rear End Plate Retainer	7AH-118		for Model 7548L	7AJ-17
18	Rotor		37	Rear Arbor Bearing	7560-97
	for Model 7530L	7530-53	38	Arbor Bearing Spacer	7AH-81
	for all others	7560-53	39	Front Arbor Bearing	R2H-97
19	Vane Packet (set of 4 Vanes)	7RL-42-4	40	Gear Case Assembly	7560-A37
20	Cylinder	7AH-3A	41	Grease Fitting	D0F9-879
21	Front End Plate	7AH-11	42	Arbor Bearing Retainer	S12-118
22	Cylinder Dowel	7AH-98	43	Inner Wheel Flange	7560-86
23	Front Rotor Bearing	R1-22	44	Sanding Pad Assembly (firm)	77A-BM825-7
24	Front Rotor Bearing Housing	7560-13	46	Wool Pad (for 7P24L)	P500-850
25	Front Rotor Bearing Retainer	W22-118	*	Arbor Wrench (15/16")	7RAQT4-254
26	Bearing Spring Washer (2)	7AH-278	*	Nameplate	7560-301
27	Bearing Housing Spacer	7AH-81	*	Nameplate Screw (2)	BN403-302
28	Exhaust Deflector	7560-23A	*	Tune-up Kit (consists of illustrated parts, 4, 8, 9 15, 17, 19, 29, 30 and 31)	7560-TK2
29	Exhaust Silencer	7560-311	*	Warning Label	TA-7560
29A	Exhaust Diffuser	7560-123	*	Sanding Pad Assembly (medium)	77A-AM825-7
30	Exhaust Deflector Rear Seal	DG20-103			

† Whenever a new Motor Housing Assembly is installed, select the correct Nameplate from the Nameplate Kit and attach it to the Housing with the Nameplate Screws.

* Not illustrated.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Safety Information Manual 04580387.

Product Information Manual 03529385.

Maintenance Information Manual 16575045.

Manuals can be downloaded from www.irtools.com.